OK-5126S

ASSEMBLY INSTRUCTION

1. INDOOR USE ONLY
2.REPLACE THE BULB AFTER THE BULB GET COOL

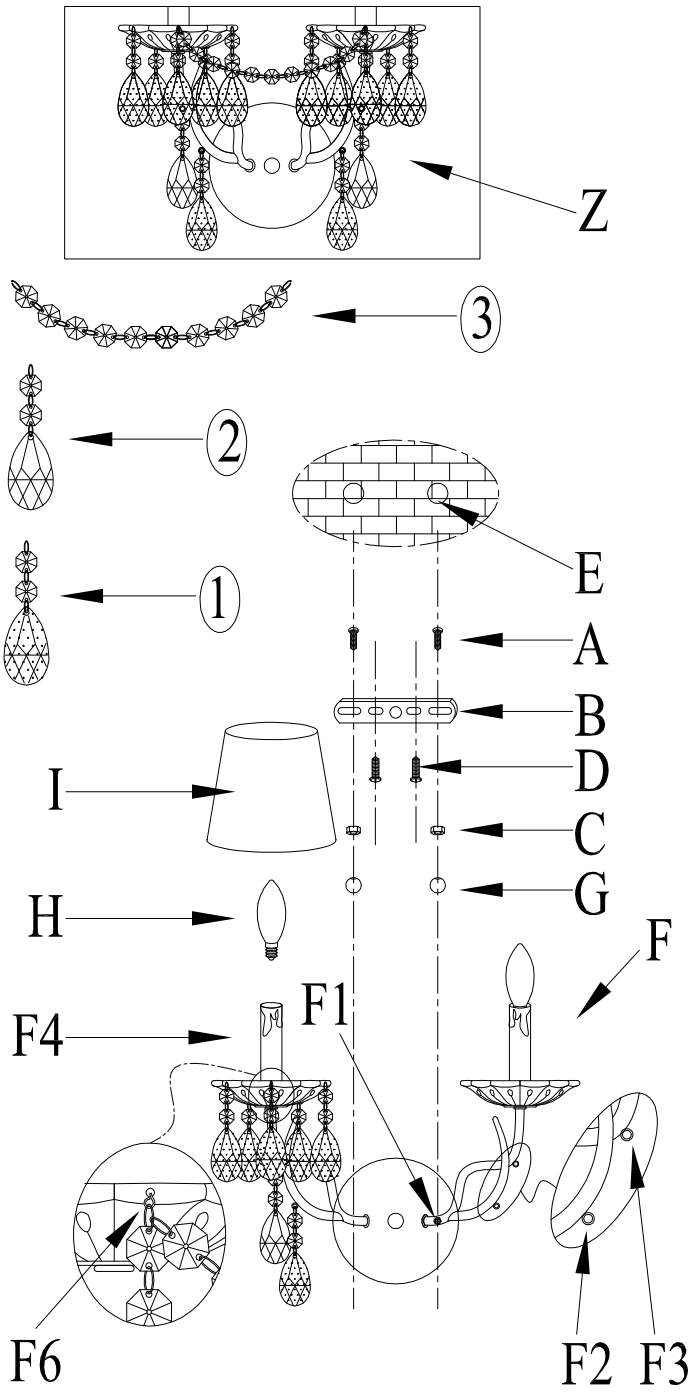

Assembly steps:

Step 1. Hang black crystal(①) onto nut(F2)

and hang crystal(②) onto nut(F3).

Step 2. Hang crystal strand(③)

between two crystal dish,
as shown in small picture(Z).

Step 3. Screw bulb(H) into socket(F4).

Step 4. Mount clip shade(I) onto bulb(H).

Step 5. Choose desired location on wall for sconce.

Step 6. Push threaded tube(A) thru wall-side of metal mount(B) and secure with screw(C).

Step 7. Push threaded tube(D) thru lamp-side of metal mount(B) into hole(E).

Step 8. Put socket(F1) into threaded tube(A) and secure with copper bead(G).

After completed the above instruction, please check once over to ensure safety. Then you may turn the power on.

If external cable or cord is damaged, it should be replaced by a qualified person to avoid hazard.